


## GE Silicone Air Barrier – Through wall flashing

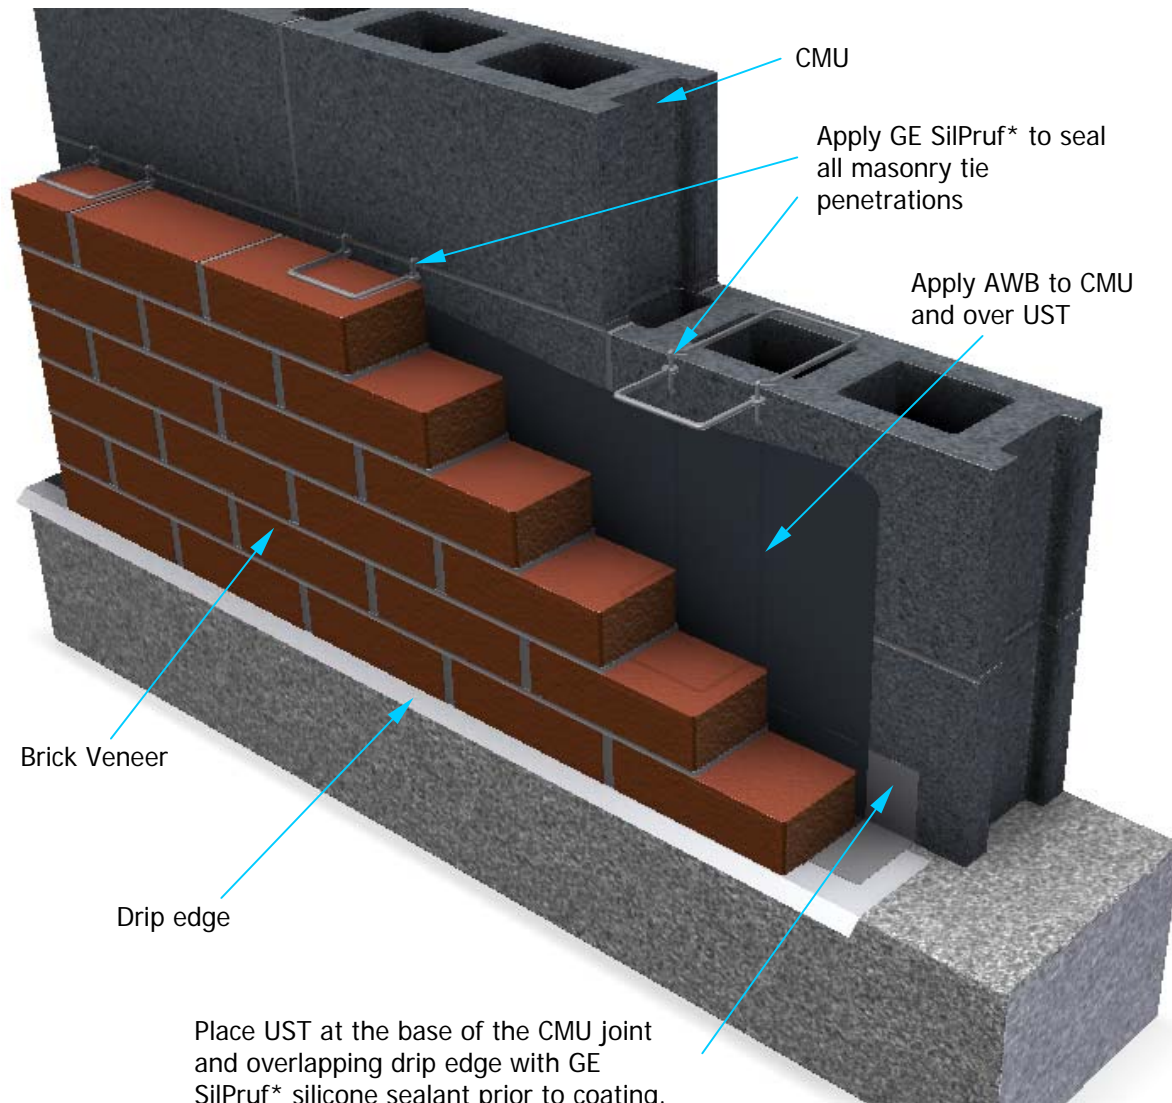

Place UST at the base of the CMU joint and overlapping drip edge with GE SilPruf\* silicone sealant prior to coating. UST should have 3" of contact on both surfaces.

### LEGEND

AWB  
UST

GE SEC2500 SilShield\* AWB Liquid Air and Water Barrier  
GE UltraSpan UST Silicone Transition



Licensed  
Products

The above detail is for illustration purposes only. It is intended as a guideline to assist Momentive product users in developing project specific details. Consult appropriate specification documents, data sheets, building codes and any other information deemed necessary for specific requirements. Momentive product users are responsible for determining the suitability of Momentive products for the particular application and all related project details. MOMENTIVE MAKES NO WARRANTY, EXPRESS OR IMPLIED, WITH RESPECT TO THE PERFORMANCE, SUITABILITY OR FITNESS FOR INTENDED USE OF ITS PRODUCTS IN ANY USER'S APPLICATION. Any sale of products or delivery of customer support and advice by Momentive Performance Materials Inc. and/or any of its affiliates ("Momentive") is made exclusively under Momentive's standard conditions of sale, which are available at <http://buy.silicones.com/custcenter/footer/terms.jsp>.